



1 MX5-P系列各部名稱 MX5-P Series component names



■ ICS-19 Proline



■ ICS-18 Proline



■ ICS-114 Proline



■ ICS-113 Proline




The parts/accessory for each model will have a bit difference, it's depend on the actual goods.
*每一款槍型基本配備不同依實際出貨為主

2


齒輪箱拆解 Disassemble Gear-box

1

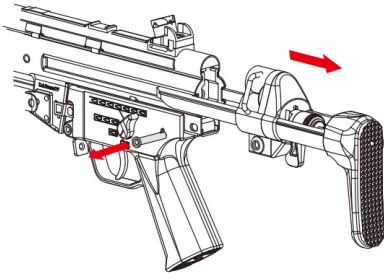


將槍身結合銷拉出後再把伸縮托整組拉出
Pull out the receiver pin
Pull out the retractable stock.

2

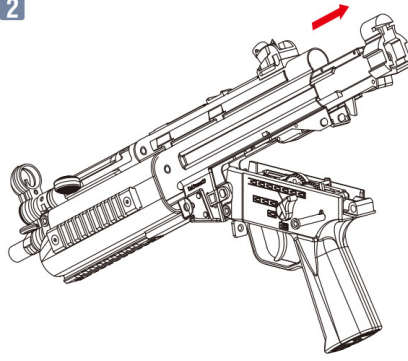


將上槍身向上拉起再把上Box抽出
Raise upper receiver pull out upper gear box.

3

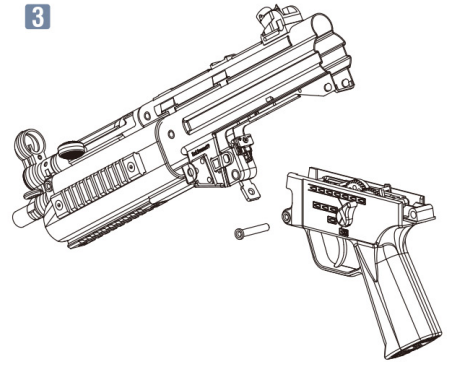


把槍身結合銷拉出即可分離上下槍身
Pull out the receiver pin and
take off the receivers.

4

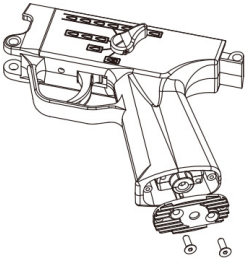


旋開馬達底蓋螺絲再把馬達底蓋卸下
Loose the motor plate screw and
take off the motor plate.

5

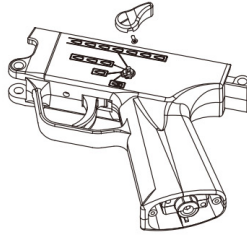


旋開選擇鈕螺絲再把選擇鈕卸下
Loose the fire selector screw
and take off the fire selector.

6

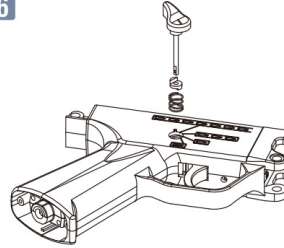

把另一側選擇鈕彈簧及固定座依序卸下
Take off the fire selector spring and
the mount on the other side.

7

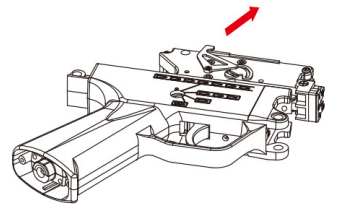


將下Box抽出
Pull out the lower gear box.


3

裝電池方法 Battery fitting method

3-1 ICS-18

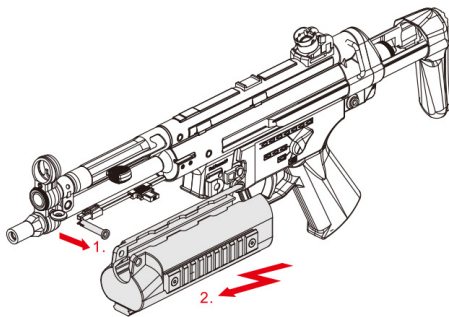


1. 把護木固定銷拉出
2. 再把護木取下
1.Pull out the handguard pin.
2.Take off the handguard.

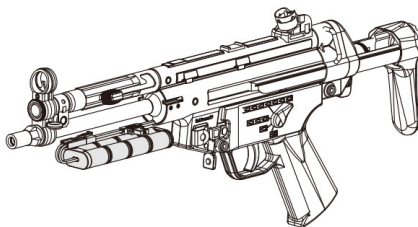


將電池接頭接好後再把護木固定
Plug in the battery and assemble
the handguard.

3-2 ICS-19

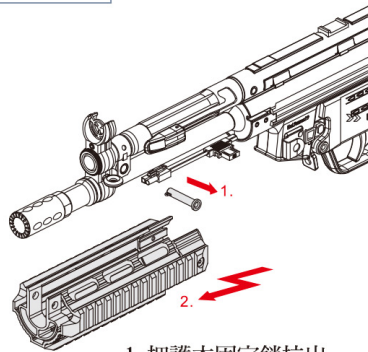


1. 把護木固定銷拉出
2. 再把護木取下
1.Pull out the handguard pin.
2.Take off the handguard.

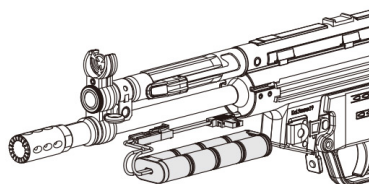


將電池接頭接好後再把護木固定
Plug in the battery and assemble
the handguard.

3-3 ICS-113/114

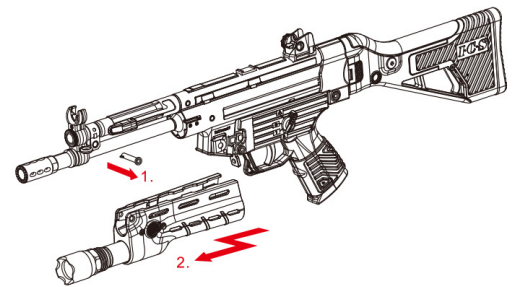


1. 把護木固定銷拉出
2. 再把護木取下
1.Pull out the handguard pin.
2.Take off the handguard.

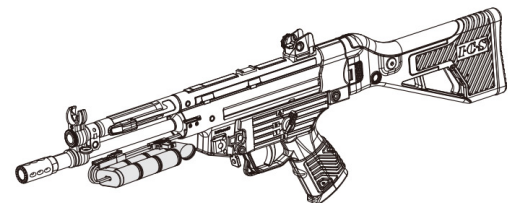

將電池接頭接好後再把護木固定
Plug in the battery and assemble
the handguard.

4 後托調整 Stock adjustment

4-1 伸縮托調整 Retractable stock

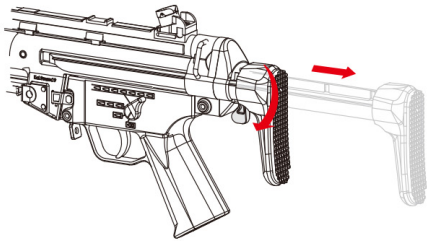


把撥桿向外撥伸縮托可向後拉
Push the switch outward and pull the retractable stock.

4-2 S.F.S stock 狙擊折疊托調整


A 長度調整

Stock lengths adjustment

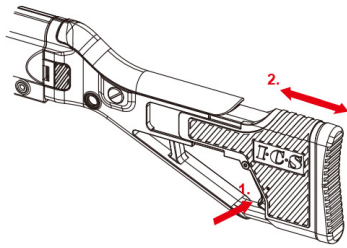


B 高度調整

Check rest heights adjustment

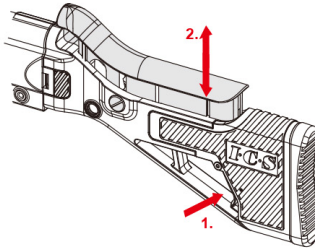


C 折疊方式

Adjust the stock

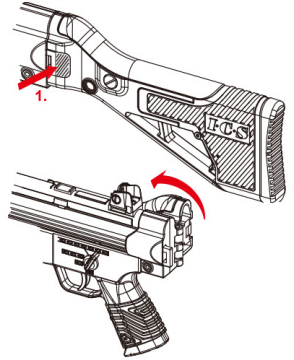

5 馬達間隙調整 Motor gap adjustment

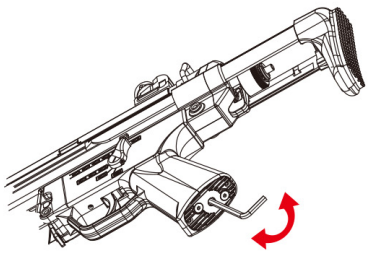


用六角扳手調整馬達間隙螺絲
(出廠時已調整好)
Adjust the gap between the motor and the gear by an allen key
(Original factory setting is for 9.6v battery)

6 HOP-UP彈道調整 Hop-up adjustment


調整Hop Up即可使BB彈往上飄或往下墜
Adjust the Hop-Up to make the trajectory up or down

1 ICS-18

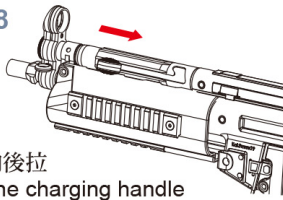


將拉柄頭向後拉
Pull back the charging handle

2

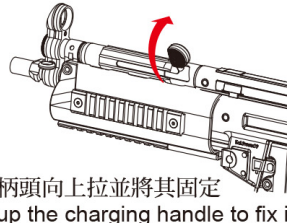


把拉柄頭向上拉並將其固定
Pull up the charging handle to fix it.

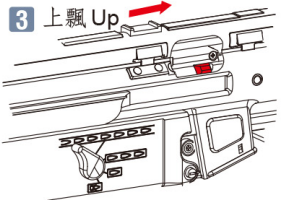


3 上飄 Up

1 ICS-19

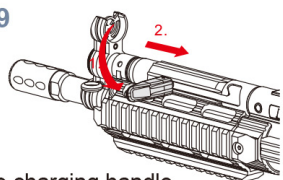


1. Lift up the charging handle
2. Pull back the charging handle

2

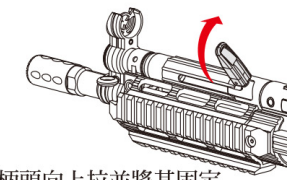


把拉柄頭向上拉並將其固定
Pull up the charging handle to fix it.

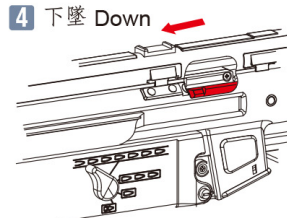


4 下墜 Down


7 覘孔調整方式 Rear sight adjustments

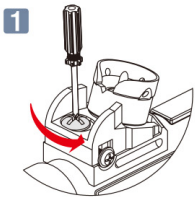

把螺絲旋開
Loose the screw

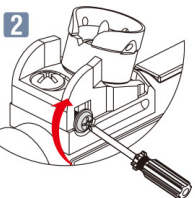

調整螺絲使覘孔左右移動。
Turn the screw to make rear sight right or left.

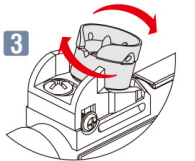


旋轉覘孔調整覘孔高度
Turn the rear sight drum to adjust rear sight height.

左右調整
Adjust rear sight right or left.




上下調整
Adjust rear sight for close combat.


8 單連發選擇方式 Selection lever setting

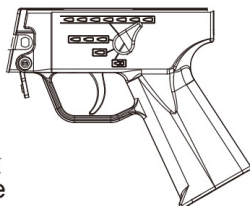


保險
Safe

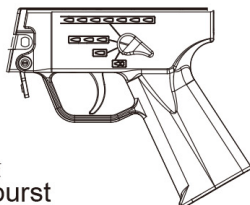

三發
Tri-burst

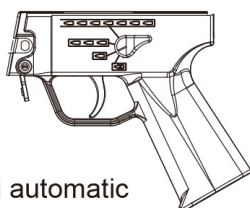

單發
Semi automatic

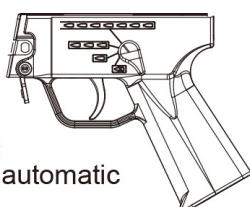


連發
Full automatic

9 彈匣使用方式 Magazine attachment


A Load & Release

上彈匣/下彈匣

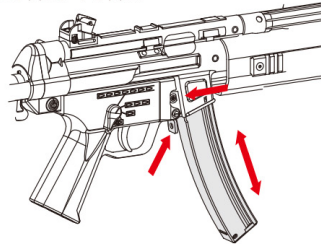


B Load BBs

裝BB彈方式

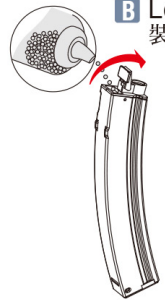

10 單發 / 三發時間差調整 Tri-burst & semi-auto setting

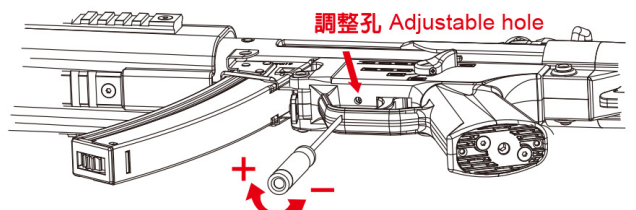

1. 清除彈匣 2. 把射擊模式切換至單發/三發模式 3. 將一字起子插入調整孔
4. 依需求調整時間差(順時針增加時間, 逆時針則減少)

*因不同電壓電池會產生不同時間差所以可自行調整*原廠設定為9.6V

1. Unload the magazine and make sure no BB in the Hop-Up.
2. Select semi-auto or tri-burst
3. Insert a slotted screwdriver into adjustment hole.
4. Turn the screwdriver clockwise or counter clockwise and test firing to get right rounds per fire.

*Different voltage battery will result in different rounds per fire when it is semi-auto or tri-burst. you can adjust the electronic fire control system to get right rounds per fire.


*The original setting is for 9.6v battery.
(Clockwise-reduce rounds, counter clockwise-increase rounds)



11 各部零件說明 Description

■ ICS-19 MX5-P MS1 狙擊折疊托


重量 Weight	總長度 Length	總長度 Length- 伸縮後 折疊後 retracted folded	彈匣裝彈數量 Magazine volume	子彈 Ammunition
2800 g	760 mm	730 mm 490 mm	230發 230 Rounds	6mm BB

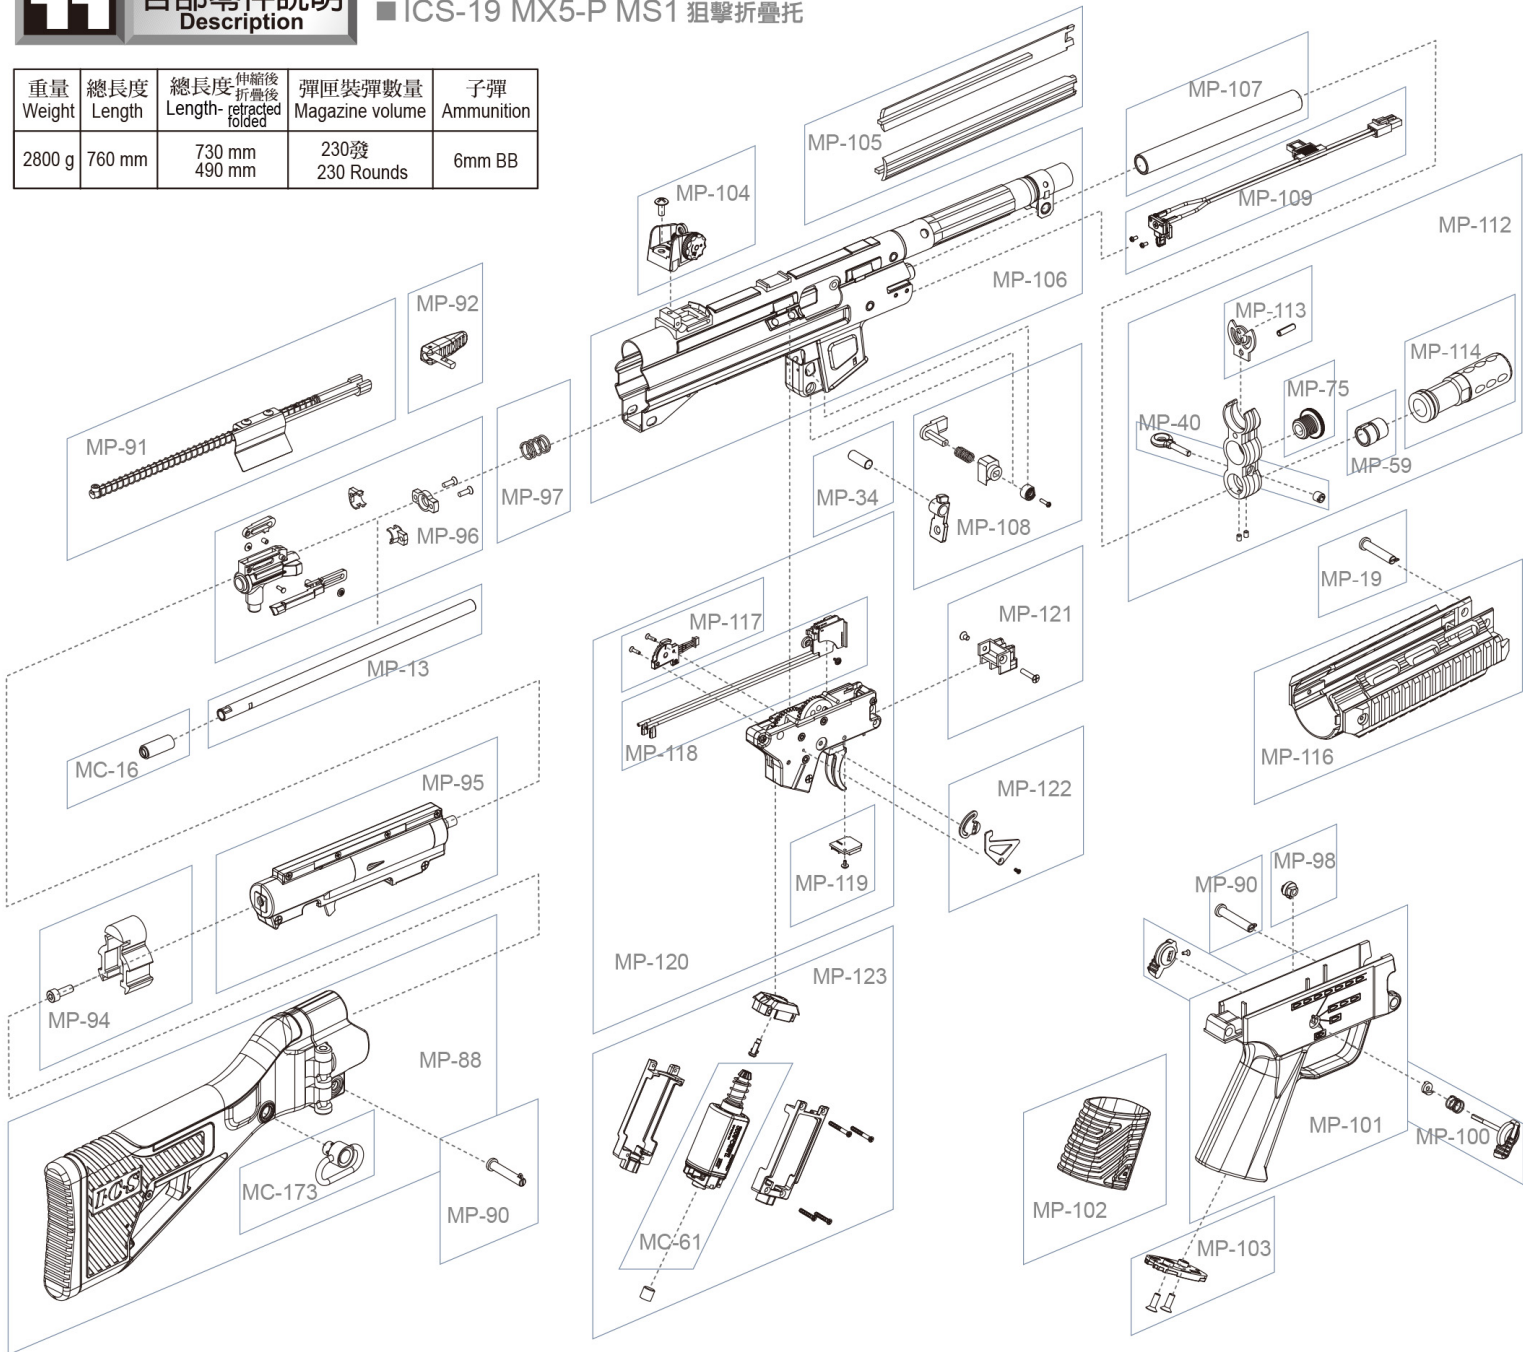

WARNING 警告 電槍使用之注意事項 Maintenance

- 請勿使用回收及劣質的 B B 彈，以減少槍管損耗與避免卡彈的情形發生。
- 如發現有卡彈的情形，應立即停止射擊，如卡彈後再勉強射擊，則會增加齒輪損耗。請使用內附通槍條，將卡彈清除後才可繼續使用。若完成通槍基本故障排除後仍無法使用時，請回原採購店家或專業經銷商尋求維修服務。
- 使用前請先確定您的電池已充滿電，當使用中發覺電池即將用盡或射擊速度降低時，應立即更換電池。
- 請定期使用通槍條清潔槍管，以保持槍支射擊時的準確性及減少卡彈的情形發生。
- 請勿經常空槍射擊，以減少 BOX 及齒輪不必要的損耗。
- Use high quality BB's to prevent further damage to the AEG and to stop jams.
- When a BB is jammed, take the cleaning rod that came with your gun and push it into the barrel moving down gently until the jammed BB comes loose. Note: The barrel does not need to be removed from the gun before unjamming a BB.
- To keep the outer appearance maintained, wipe down the gun with a soft cloth.
- Do not dry fire the gun at any time to reduce damage to the gear box.
- After playing, remove the magazine, switch to single shot mode and fire one shot to release the spring within the gearbox. Finally disconnect the battery. Clean and lubricate your AEG before storage, as needed.

Always read through this manual before operation user restricted to 18 year of age or older

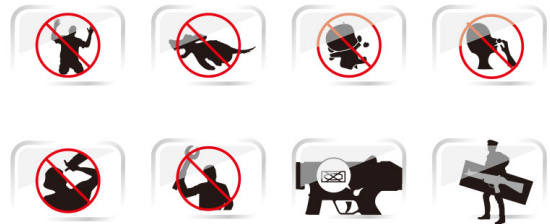

一芝軒企業有限公司 www.icsbb.com
I CHIH SHIVAN ENTERPRISE CO., LTD.
TEL: 886-4-25256461 FAX: 886-4-25256484